本書は、旧製品の取扱説明書を電子化したものです。
一部見えにくい箇所がございます。

記載されている内容はすべて販売当時のものです。
仕様や価格などは、その後予告なしに変更されることがあります。
あらかじめご了承ください。

# CASIO

アナログシリーズ（EL-5）

1323


取扱説明書

このたびは弊社製品をお買い上げくださいまして誠にありがとうございます。末長くご愛用いただくために、この説明書をよくお読みいただき、正しくお取り扱いくださいますようお願い申し上げます。なお、この説明書は大切に保存し、必要に応じてご覧ください。

## 時刻の合わせ方

(1) 秒針が12時の位置に来たら、

リューズを引いて針を止めます

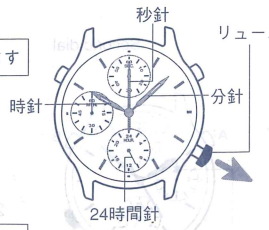


(2)

リューズを回して時・分を合わせます


※右回り、左回りのどちらに回しても大丈夫ですから、どちらか早いほうを選んで合わせると早くセットできます。




(3) 時報に合わせて

リューズを押します

→針は再び動き始めます。
※時報は「時報サービス117番」が便利です。
※このとき、±1秒以内の誤差が生じることがあります。

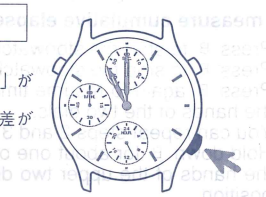

## ストップウオッチの使い方

本機は、1秒単位で59分59秒（60分計）まで計測でき、以後0に戻って計測し続けます。

### ■計測のしかた

Ⓐボタンを押すごとに計測がスタート／ストップします。計測開始と同時に時計の文字板にある分針・秒針が動き始めます。それぞれ計測時間の分、秒を表します。




例）計測時間10分15秒

計測の流れ


Ⓐ スタート → Ⓐ ストップ →（1～2秒）→ Ⓐ リセット

（ストップウオッチ用分針、秒針が“0”の位置に早送りします）

※積算計測…ロスタイムのある場合は、ストップ後リセットせずに再スタート（Ⓐボタン）すれば、表示タイムに引き続き計測を始めます。

ご注意

- ●リセット中、ストップウオッチ用分針・秒針が“0”の位置に早送りしている間は、Ⓐボタンを押しても計測はスタートしません。
- ●針が早送りしている間は、Ⓑボタンを押してもELライトは発光しません。
- ●計測ストップ後にⒶボタンを押しても針が“0”の位置に戻らなかった場合は、リューズを引いてからⒶボタンを押します。針が“0”の位置に揃ったら、リューズを押し戻します（リューズを引いている間は、通常時刻の針も止まります）。

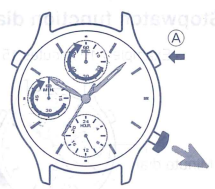


### ■表示照明用ELライトについて

Ⓑボタンを1回押すと文字板が約2秒間発光します。

※Ⓑボタンを押し続けても、2秒間で発光は消えます。
※ストップウオッチのリセット中（針が早送りしている）間は、Ⓑボタンを押しても発光しません。（詳しくは、『ストップウオッチの使い方』をご参照ください）
※ライト点灯中は、どのボタンを押しても機能しません。




＜ELライトの発光に関するご注意＞

・直射日光下では、発光が見えにくくなります。
・発光中に時計本体より音が聞こえることがありますが、これはELパネルが点灯する際の振動音であり、異常ではありません。

## 製品仕様

| | |
|---|---|
| 水晶発振周波数 | ：32,768Hz |
| 常温携帯精度 | ：平均月差±20秒以内 |
| 時刻表示 | ：時・分・秒（3針）、24時間針 |
| ストップウオッチ機能 | ：計測表示＝分・秒（2針）計測単位＝1秒<br>計測範囲＝59分59秒（60分計）<br>計測機能＝通常計測、積算計測 |
| その他 | ：EL（エレクトロルミネッセンス）ライト |
| 主要回路素子 | ：音叉型高性能水晶振動子　ワンチップCMOS-LSI |
| 使用電池 | ：SR927W（電池別途販売）<br>※電池はカシオ指定の電池をお使いください。 |
| 電池寿命 | ：約2年（1日当りELライト2秒間を1回使用した場合）<br>※ただし、ELライトの使用条件により、電池寿命が短くなることがあります。<br>●1日当りELライト2秒間を5回使用：約1.5年（約18ケ月）<br>●1日当りELライト2秒間を10回使用：約1年 |

## 安全上のご注意

### 絵表示について

この注意書および製品への表示では、製品を安全に正しくお使いいただき、あなたや他の人々への危害や財産への損害を未然に防止するため、色々な絵表示をしています。その表示と意味は次のようになっています。

### 絵表示の例

△記号は「気をつけるべきこと」（注意）を意味しています。（左の例は感電注意）

⃠記号は「してはいけないこと」（禁止）を意味しています。（左の例は分解禁止）

●記号は「しなければならないこと」（強制）を意味しています。（左の例は電源プラグをコンセントから抜く）

| | |
|---|---|
| ⚠警告 | この表示を無視して誤った取り扱いをすると、人が死亡または重傷を負う危険が想定される内容を示しています。 |
| ⚠注意 | この表示を無視して誤った取り扱いをすると、人が傷害を負う危険が想定される内容および物的損害のみの発生が想定される内容を示しています。 |

### ⚠警告

本機をスキューバダイビング（アクアラング）に使用しないでください。
※本機はダイバーズウオッチではありません。誤って使用すると、事故の原因となることがあります。



#### 電池の取り扱いについて

本機で使用しているボタン電池を取り外した場合は、誤ってボタン電池を飲むことがないようにしてください。特に小さなお子様にご注意ください。

電池は小さなお子様の手の届かない所へ置いてください。万一、お子様が飲み込んだ場合は、ただちに医師と相談して下さい。

### ⚠注意

#### お手入れについて

本体やバンドは吸湿性のよい柔らかい布でふいて、いつも清潔にしてご使用ください。汚れたままにしておくと、変色や破損、皮膚のかぶれの原因となります。万一、本機使用により皮膚がかぶれたときは、そのバンドの使用を中止し、皮膚科の専門医にご相談ください。

ステンレス製のバンドの場合、汚れからサビが発生し、衣服の袖を汚すことがあります。

#### 分解しないでください

本機を分解しないでください。本機が故障したり、ケガをする原因となることがあります。



## ご使用上の注意

### ■防水性

●表面または裏蓋にWATER RESISTまたはWATER RESISTANTと表示されているもの。

| | BAR無し | 5BAR | 10BAR | 20BAR |
|---|---|---|---|---|
| 洗顔、雨 | ○ | ○ | ○ | ○ |
| 水仕事、水泳 | × | ○ | ○ | ○ |
| ウインドサーフィン | × | × | ○ | ○ |
| スキンダイビング（素潜り） | × | × | ○ | ○ |

※専門的な潜水＝スキューバーダイビング（アクアラング）でのご使用はお避けください

●表面または裏蓋にWATER RESISTまたはWATER RESISTANTと表示されていないもの
防汗構造になっておりませんので、多量の汗を発する場合、もしくは湿気の多い場所でのご使用や直接水に触れるようなご使用はお避けください。

●防水構造の機種でも、水中でのボタン操作は行なわないでください。
●海水に浸したときは真水で洗い、塩分や汚れをふきとってください。
●防水性を保つために定期的（2～3年を目安に）なパッキン交換をおすすめします。
●電池交換の際、防水検査を行ないますので、必ずお買い上げの店あるいは最寄りのカシオサービスセンターにお申し付けください。（特殊な治具を必要とします）
●防水時計の一部にデザイン上皮バンドを使用しているモデルがありますが、皮バンド付の状態で、水仕事・水泳など直接水のかかるご使用はお避けください。

### ■バンド

●バンドは指一本が入る程度の余裕をもたせてご使用ください。
●樹脂バンドも皮バンド同様、日々の使用により劣化し、切れたり折れたりする場合があります。バンドにヒビなどの異常がある場合は、必ず新しいバンドと交換してください。そのときは、お買い上げ店または最寄りのカシオサービスセンターにバンド交換をお申し付けください。保証期間内であっても実費にて申し受けます。
●樹脂バンドの表面にシミ状の模様が発生することがありますが、人体および衣服への影響はありません。また、布等で簡単にふきとることができます。

### ■温度

●自動車のダッシュボード等の高温になる所に放置しないでください。また、寒い所に長く放置しないでください。遅れ、進みが生じたり止まったりすることがあります。
●＋60℃以上の所に長時間放置すると液晶パネルに支障をきたすことがありますのでご注意ください。

### ■ショック

●通常の使用状態でのショックや軽い運動（キャッチボール、テニスなど）には十分耐えますが、落としたり、強くぶつけたりすると故障の原因になります。

### ■磁気

●家庭電気製品（テレビなど）程度の磁気には影響ないように耐磁構造をとってありますが、強い磁気を発生する器具に近づけると一時的に遅れ・進みが生じることがあります。

### ■薬品類

●水銀や化学薬品（シンナー、ガソリン、各種溶剤、またはそれらを含有しているクリーナー、接着剤、塗料、薬剤、化粧品類）が付着すると、ケース、バンドなどに変色や破損を生ずることがありますのでご注意ください。

### ■保管

●長期間ご利用にならないときは汚れ、汗、水分などをふきとり、高温、多湿の場所を避けて保管してください。

### ■お手入れのしかた

●時計も衣服同様、直接身につけるものです。本体ケースやバンドの汚れ、汗・水分などのは吸湿性のよい柔らかい布でふきとり常に清潔にご使用ください。
●金属バンドは、時々、部分洗いすることをおすすめします。部分洗いの際、時計本体に水がかからないようにしてください。非防水時計の場合は故障の原因となり、また防水時計でも石けん水により防水性が損われることがあります。

### ■お手入れを怠ると

「サビ」●ステンレススチールはサビにくい性質ですが、汚れによりサビが発生します。
※汚れにより酸素が断たれると、表面の酸化被膜が維持できなくなり、サビが発生します。
●表面はきれいでも、すきまに付着した汚れやサビがしみ出して、衣類の袖を汚すことがあります。

「劣化」●樹脂バンドは汗などの水分で濡れたままにしておいたり、湿気の多い場所に保管すると劣化が早くなり、切れたり折れたりすることがあります。

「かぶれ」●皮膚の弱い方やアレルギー体質の方はかぶれたりすることがあります。
●特に、皮バンドや樹脂バンドをお使いの方は、こまめにお手入れをするか、金属バンドのご使用をおすすめします。
●万一、かぶれた場合には、そのバンドの着用を中止し、皮膚科の専門医にご相談ください。

### 電池交換について

### ■最初の電池

●工場出荷時にモニター用電池が組み込まれておりますので、記載された電池寿命に満たないうちに切れることがあります。
※モニター用電池とは時計の機能や性能をチェックするための電池のことで、時計本体価格に電池代は含まれておりません。
※電池交換の場合は保証期間内でも有料となります。

### ■消耗

●電池が消耗しますと「時刻の狂いが目立ったり」「表示が見にくくなったり」「消えたり」します。
●消耗した電池を使っていると故障の原因になりますので、お早めに交換してください。

### ■電池交換

●電池交換は必ずお買い上げ店または最寄りのカシオサービスセンターにお申しつけください。
●電池は必ず当社指定の専用電池と交換してください。指定以外の電池を使用しますと故障の原因となる場合があります。
●電池交換の際、防水検査を行ないます。（防水検査は別途有料となります）

### ■クリーンコートについて

クリーンコートを施した皮バンドは、汗等による細菌の増殖を抑え、匂いの発生を防ぎ、常に清潔で快適な装着感が得られます。抗菌・防臭の効果を上げるために、バンドの汚れ、汗、水分等は吸湿性のよい柔らかい布でふきとり、常に清潔にしてご使用ください。クリーンコートは微生物や細菌の増殖を抑えるためのもので、アレルギー等による皮膚のかぶれ等を抑えるものではありません。

### ■蛍光商品のお取り扱いについて

蛍光色商品のケース／バンドを使用しているものは、以下の点にご注意ください。

●長時間、直射日光に当てますと、色あせする場合があります。
●長時間、濡れたままにしておくと色が落ちるおそれがありますので、濡れているときはすぐに水分をふきとって、乾かしてください。
●長時間、他の商品と密着させたり、濡れたまま他の商品と一緒にしておくと、他の商品に色が移行することがありますので、濡れているときはすぐに水分をふきとり、密着保存を避けてください。
●プリントがしてある場合は、プリント部分を強くこすると他の部分に色がつくことがあります。

### ■ELパネル（表示照明部）の交換について


表示照明用として本機に使用しているELパネル（エレクトロルミネッセンスパネル）は、長時間使用しますと明るさが弱くなり、光が暗く見える場合があります。このようなときにはお買い上げ店または最寄りのカシオサービスセンターに交換をお申し付けください。実費にて申し受けます。

# CASIO
## ANALOG(EL-5)
1323
NSTRUCTION

Congratulations on your purchase of this CASIO Quartz Watch.

Althouth highly sophisticated,this watch is delightfully simple to use, and by referring to this guide you will enjoy all the features of this reliable ultra-precise time piece.

## To set the analog hands

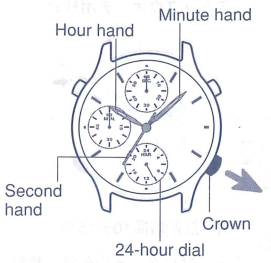


1. Stop the second hand by pulling the crown out when the second hand is at 12 o'clock position.
2. Set the hands by turning the crown.
3. In accordance with a time signal, push the crown in.

・Analog time is kept by a mechanical timepiece. Because of this, the second hand may not start to move exactly when you push the crown back in.

## Stopwatch function

The Stopwatch function lets you measure elapsed time and cumulative elapsed time. The range of the stopwatch is 59 minutes, 59 seconds. The upper two dials on the face of the watch indicate the elapsed minutes and seconds during the stopwatch operation.

**Stopwatch function dials**


Example : 10 minutes 15 seconds




Example : 33 minutes 42 seconds



**To measure elapsed time**

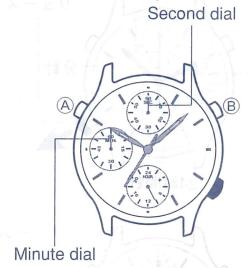


1. Press Ⓑ to start the stopwatch.
   ・The hands of the two upper dials move in accordance with the elapsed minutes and seconds.
   ・Once the measuring time reaches 60 minutes, the timing starts again from 0 minute 0 second.
2. Press Ⓑ to stop the stopwatch.
3. Hald down Ⓑ for about one or two seconds. At this time, the hands of the upper two dials return to the 12 o'clock position.

・You will not be able to start timing with the stopwatch while the hands are moving to this starting position.
・If the hands of the upper dials do not point exactly to the 12 o'clock position after you hold down Ⓑ, pull out the crown of the watch and hold down Ⓑ again. After you get the hands pointed to 12 o'clock, press the crown to return it to its original position.


**To measure cumulative elapsed time**

1. Press Ⓑ to start the stopwatch.
2. Press Ⓑ to stop the stopwatch.
3. Press Ⓑ again to resume timing from the time shown by the hands of the two dials.
   You can repeat steps 2 and 3 as many times as you like.
4. Hold down Ⓑ for about one or two seconds. At this time, the hands of the upper two dials return to the 12 o'clock position.

About the backlight

Pressing Ⓐ illuminates the display for about two seconds. If you hold down Ⓐ, the light automatically disappears after two seconds.

・The display is not illuminated while the hands are moving to 12 o'clock position during the stopwatch operation (For details, see step 3 in "To measure elapsed time").
・The backlight of this watch employs an electro-luminescent (EL) light, which loses its illuminating power after very long term use.
・The watch emits an audible sound whenever the display is illuminated. This is caused because the EL light vibrates slightly when lit. It does not indicate malfunction of the watch.
・Frequent use of the backlight shortens the battery life.

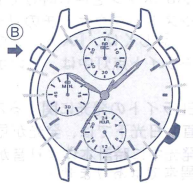


## Specifications

Accuracy at normal temperature : ±20 seconds a month

Analog : 3 hands (hour, minute, second)
3 dials (minute, second, 24-hour)

Stopwatch function
- Measuring capacity : 59 minutes 59 seconds
- Measuring unit : 1 second
- Measuring modes : Elapsed time, cumulative elapsed time

Other : Electro–luminescent (EL) light

Battery : One silver oxide battery (Type : SR927W)

Battery life : Approximately 2 years on type SR927W assuming 1 light operation (2 seconds) per day

The following shows approximations of how backlight operation affects battery life.

5 times/day:approximately 18 months

10 times/day:approximately 12 months

## Important Safety Precautions

Warnings and precautions that appear in the documentation for this product and, in some cases, on the display of the product itself are indicated by graphic symbols. These symbols are intended to ensure safe and correct operation, and to protect you and others against injury and loss. The following shows samples of the graphic symbols and describes what each of them means.

### Examples

A figure enclosed within a triangle indicates a matter that deserves caution. The example shown here warns against electrical shock.

A figure enclosed within a circle with a line running diagonally through it indicates something you should not do. The example shown here indicates that you must never disassemble the product.

A figure enclosed within a black circle indicates something you must do. The example shown here indicates that you must unplug the product from the AC power outlet.

**⚠Warning** This symbol alerts you to precautions about matters that, if ignored, could possibly put you at risk of serious personal injury or even death.

**⚠Caution** This symbol alerts you to precautions about matters that, if ignored, could possibly cause material damage or put you at risk of serious personal injury.

### ⚠Warning

This probuct is not a diver's watch. Never use it while scuba diving with air tanks. Doing so creates the risk of personal injury.



#### Battery Handling

Take care to ensure that the button-type battery used to power this product is not accidently swallowed. Be especially careful to keep the battery out of the reach of small children.

Keep the battery in a place where they cannot be found by small children. If the battery is accidently swallowed, consult with a physician immediately.

### ⚠Caution

#### Taking care of your watch

Always keep your watch clean by wiping the case and band with a soft, highly absorbent cloth. Wearing the watch while it is dirty can result in discoloration or damage to the finish of the watch, and reddening of your skin.
Should you ever discover a rash or reddening of your skin in the vicinity of the watch, take it off and consult a dermatologist as soon as possible.
Also note that soiling can cause rusting of stainless steel bands, which in turn can soil clothing,

#### Do not try to take this product apart.

Never try to take this product apart. Doing so creates the risk of personal injury and damage to the product.



## Care of your watch

●Battery life:Battery life starts when battery is factory installed. At first sign of power fade (slow timing), renew battery at sales store or CASIO distributor.

●As this watch contains precise electronic components, it is suggested that the back cover be removed only by authorized personnel.

●Your watch is ranked I through V according to the water resistance chart below.Check the ranking of your watch to determine proper use.

| Rank | Case designation | Splashes, rain, etc. | Swimming, car washing, etc. | Snorkeling, diving,etc. | Scuba diving |
|---|---|---|---|---|---|
| Ⅰ | — | No | No | No | No |
| Ⅱ | WATER RESISTANT | Yes | No | No | No |
| Ⅲ | 5 BAR WATER RESISTANT | Yes | Yes | No | No |
| Ⅳ | 10 BAR, 20 BAR WATER RESISTANT | Yes | Yes | Yes | No |

Ⅰ Not water-resistant.
Ⅱ Do not pull out the crown while the watch is wet.
Ⅲ Do not operate buttons or pull out the crown while the watch is under water.
Ⅳ Button operation underwater is allowed, but do not operate recessed buttons and do not pull out the crown while the watch is under water. If the watch is exposed to salt water, wash thoroughly and wipe dry.
●Some water-resistant watches feature leather bands. Do not wear such a model during swimming or any other activity during which the band is immersed in water.

●A waterproof rubber seal is used to exclude water and dust. As rubber deteriorates after long usage, the seal should be replaced periodically (every2-3years).

●Should water or condensation appear in the watch, immediately have it overhauled because water can corrode electronic parts inside the case.

●Avoid exposing it to extremely high and low temperatures.

●Although the watch is designed to withstand shocks under normal use, it is inadvisable to subject it to hard knocks—rough usage or drops onto hard surfaces.

●Avoid fastening the band too tightly. You should be able to insert your finger inside the band.

●Clean the watch and band with a soft cloth, dry or moistened with mild soap. To avoid surface damage, never use volatile chemicals (such as benzine,thinners, spray cleaners, etc.).

●Gold plated surfaces can be kept in good condition by regularly wiping with a soft damp cloth. Discoloration can be removed with detergent.Always keep unused watches in a dry place.

●Avoid exposing the watch to strong chemicals such as gasoline, cleaning solvent, aerosol spray,adhesive agent, paints, etc. whose chemical action will destroy the seals, case and finish.

●Some of waterproof modules are designed by leather band.
To protect the band, avoid using them in such cases as water concerned jobs,swimming, etc.