
OPERATION CHART: MODULE QW-725


READING THE DISPLAY

Press Ⓒ to see an outline for each function.

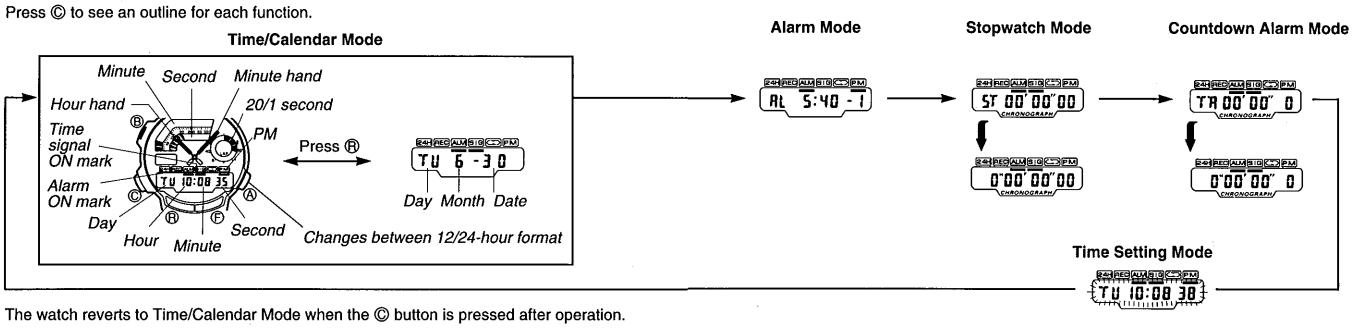


The watch reverts to Time/Calendar Mode when the Ⓒ button is pressed after operation.

SETTING TIME AND DATE

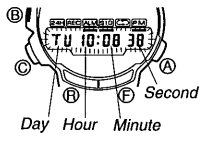

1. Press Ⓒ to move to the Time Setting Mode.
2. Press Ⓑ in Time Setting Mode to set time and date.
3. Press Ⓕ or Ⓡ on a time signal to correct seconds.
4. Press Ⓒ to shift flashing digit(s). Digit(s) to be changed will flash.



5. Each press of Ⓕ (or Ⓡ) increments (or decrements) digits by one. Keep pressed to change at high speed.
6. Press Ⓑ to complete setting.


* *Display automatically returns to TIME if no button is pressed for a few minutes.*

SETTING ANALOG TIME

Press Ⓑ in Time/Calendar Mode to advance the hands. Keep pressed for quick advance.

USING 3 DAILY ALARMS


Three daily alarms can be set independently. The beeper sounds for 20 seconds at the preset time. Press any button to stop beeper. If the time signal is set, the watch sounds every hour on the hour.

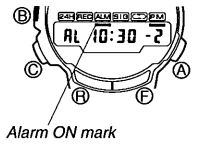

Alarm ON/OFF Setting
In each Alarm Mode, press Ⓐ to activate or deactivate the alarm. When the time signal is ON, the watch chimes every hour on the hour.

Sound Demonstration
Press and hold Ⓕ or Ⓡ in Alarm Mode to sound beeper.

Setting Alarm Time
1. Press Ⓕ or Ⓡ in Alarm Mode to select alarm No 1,2 or 3.




2. Press Ⓑ to set new alarm time.
3. Pressing Ⓕ (or Ⓡ) increments (or decrements) digits by one. Keep pressed for high speed change.
4. Press Ⓒ to shift flashing position. The digit(s) to be changed will flash.
5. Press Ⓑ to complete setting.

* *Display automatically returns to initial Daily Alarm Mode display if no button is pressed for a few minutes.*

USING COUNTDOWN ALARM

The countdown can be set from 1 second to 24 hours (Display shows 0"00'00"), and times to an accuracy of 1/10th of a second. Start/stop operation is possible by pressing the Ⓡ button and is confirmed by a signal. When the display reaches zero, the buzzer sounds for 10 seconds unless any button is pressed.

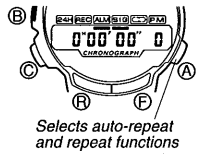


Setting Countdown Time
1. Press Ⓑ in Countdown Alarm Mode to set new time.
2. Press Ⓕ to increment digits and Ⓡ to decrement. Keep pressed to move quickly.
3. Press Ⓒ to shift flashing digits.
4. Press Ⓑ to complete setting.

* *Display automatically returns to initial Countdown Alarm Mode if left unused for a few minutes.*

Repeat Function
Pre-entered time is retrieved when display reaches zero.
Auto-Repeat Function
Pre-entered time is retrieved and started again when display reaches zero.

USING STOPWATCH

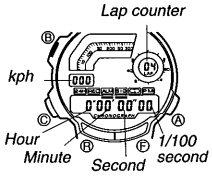

A signal confirms start/stop operation. Total elapsed time display is limited to 23 hours 59 minutes 59.99 seconds. There after it can be reset and started again. The watch's lap function can store up to 100 lap times and average lap speeds as well as total elapsed times and total average speeds.

* *Average lap speed is the average speed per lap for competitions which involve repeating the same course a number of times.*

a) Net time measurement
Ⓡ Start → Ⓡ Stop (Time loss) → Ⓡ Re-start → Ⓡ Stop → Ⓕ Reset


b) Lap time measurement
Ⓡ Start → Ⓕ 1st lap → Ⓕ 2nd lap → Ⓡ Stop → Ⓐ Recall → Ⓕ Reset

c) 1st-2nd place times
Ⓡ Start → Ⓕ Split First finisher. → Ⓡ Stop Second finisher. Record time of first finisher. → Ⓐ Recall Record time of second finisher. → Ⓕ Reset

Using the Memory Function
When the course distance and number of laps are set, the average lap speed is automatically calculated from the measured lap times and stored to memory. The lap times and average lap times stored in memory can be recalled by pressing Ⓐ.


* *Course distances of up to 99.999km and up to 100 laps can be set.*

Setting the Course Distance and Laps
1. Press Ⓑ in Stopwatch Mode to set course distance and laps.
2. Press Ⓒ to shift flashing digit(s). Digit(s) to be changed will flash.



3. Pressing Ⓕ (or Ⓡ) increments (or decrements) the digits by one. Keep pressed for high speed change.
4. Press Ⓑ to complete setting.


Measuring Lap Times and Average Lap Speed
Example 1: Storing 4 lap times and average lap speed

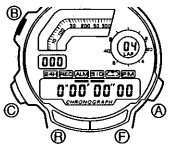

1. Press Ⓕ in Stopwatch Mode to reset the display if the measuring results appear. The memory will be cleared.
2. Press Ⓡ to start timing.




3. Press Ⓕ to take your 1st lap time and average lap speed.
   • Every press of Ⓕ automatically stores lap time and average lap speed in memory.
4. Press Ⓕ to take your 2nd lap time.
5. Press Ⓕ to take your 3rd lap time.

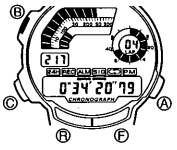

6. Press Ⓡ to stop. Lap time and average lap speed of the 4th lap is taken. Now these 4 laps and average lap speed are automatically stored in the memory.

Recalling Lap Times and Average Lap Speed
Example 2: Recalling lap times and average lap speed of a 4-lap run.

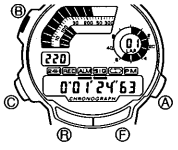

1. Press Ⓐ to recall 1st lap time and average lap speed. Each additional press of Ⓐ advances the lap times and average lap speed by one. Keep pressing for quick advance.
2. Press Ⓕ to delete all memory contents, if necessary.

* *When left on, the lap time and average lap speed display automatically returns to the total elapsed time and total average speed display after several seconds.*

- The stopwatch can measure times of up to 23 hours, 59 minutes and 59.99 seconds. When this time is exceeded, laps can no longer be taken and the error display "E" appears.
- The "E" display appears when the average speed exceeds 1,000kph.
- When the average speed is 295-999kph, the entire display area around the average speed lights.
- The total average speed is calculated from the preset course distance and number of laps, and the total measured time; therefore, accurate calculations are not possible when lap measurements have been made with different numbers of laps. If a course distance error or number of laps error is discovered after a measurements has been made, the distance or number of laps can be reset if the Ⓕ button has not yet been pressed to reset, allowing correct calculations to be obtained.